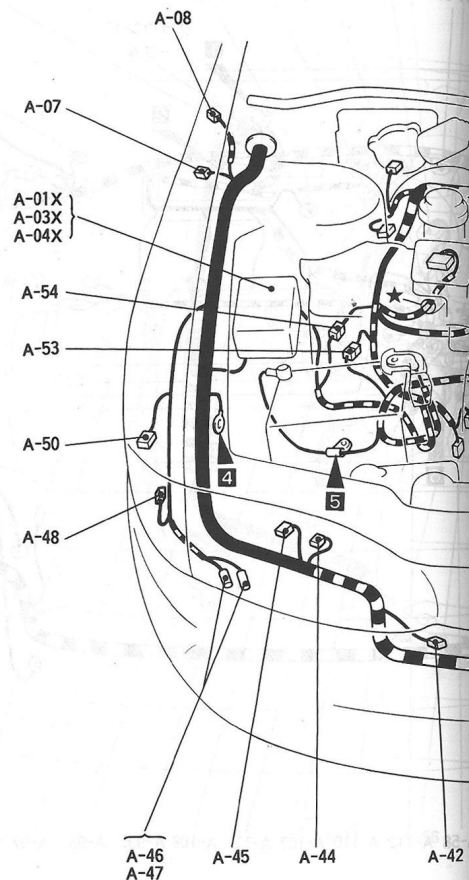


エンジン ルーム Engine Compartment

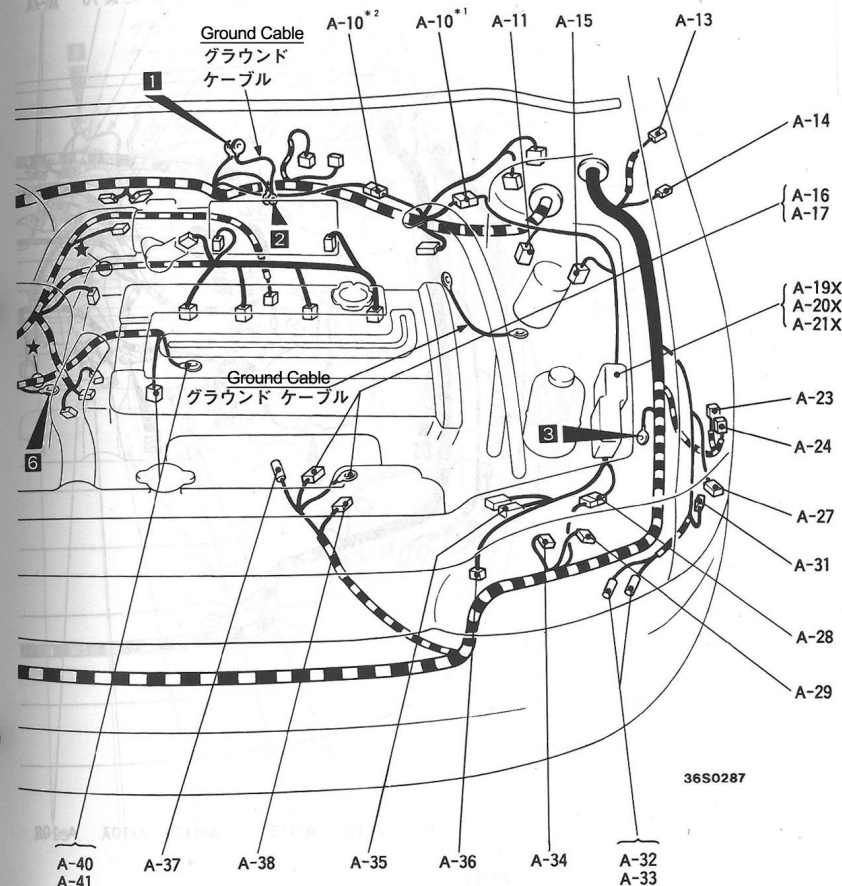
4G63

コネクタ記号

A
-01
-54

- A-01X Alternator Relay
 A-02X —
 A-03X Radiator Fan Motor Relay
 A-04X Headlight Relay
 A-05X —
 A-06X —
 A-07 ABS Speed Sensor (Front RH)
 A-08 Side Turn-Signal Light (RH)
 A-09 —
 A-10 Connection of Control Harness and A/C Harness (With A/C)
 Or
 Control Harness Joint Connector (Without A/C)
 A-11 A/C Compressor
 A-12 —
 A-13 Side Turn-Signal Light (LH)
 A-14 ABS Speed Sensor (Front LH)
 A-15 Triple Pressure Switch
 A-16 } Alternator
 A-17 }
 A-18 —
 A-19X Condenser Fan Motor Relay
 A-20X Fan Motor Control Relay
 A-21X A/C Compressor Relay
- Centralized Junction
 集中ジャンクション
- Centralized Junction
 集中ジャンクション

- A-22 —
 A-23 } ABS Hydraulic Unit
 A-24 }
 A-25 —
 A-26 —
 A-27 Front Turn-Signal Light (LH)
 A-28 Connection of Front Harness and A/C Harness
 A-29 Headlight (LH)
 A-30 —
 A-31 Front Fog light Spare Connector (LH : 2 Pin)
 A-32 } Horn (LH)
 A-33 }



- A-34 Position Light (LH)
 A-35 Outside Air Temperature Sensor (With Full-Auto A/C)
 A-36 Condenser Fan Motor
 A-37 Power Steering Oil Pressure Switch
 A-38 Oil Pressure Switch
 A-39 —
 A-40 } Starter
 A-41 }
 A-42 Radiator Fan Ass'y
 A-43 —
 A-44 Position Light (RH)
 A-45 Headlight (RH)

- A-46 } Horn (RH)
 A-47 }
 A-48 Front Fog light Spare Connector (RH : 2 Pin)
 A-49 —
 A-50 Front Turn-Signal Light (RH)
 A-51 —
 A-52 —
 A-53 Connection of Control Harness and Battery Cable
 A-54 Connection of Front Harness and Control Harness

備考

- * 1 : A/C 装着車
 * 2 : A/C 非装着車

Note

- * 1 : With A/C
 * 2 : Without A/C

36S0287

4G63

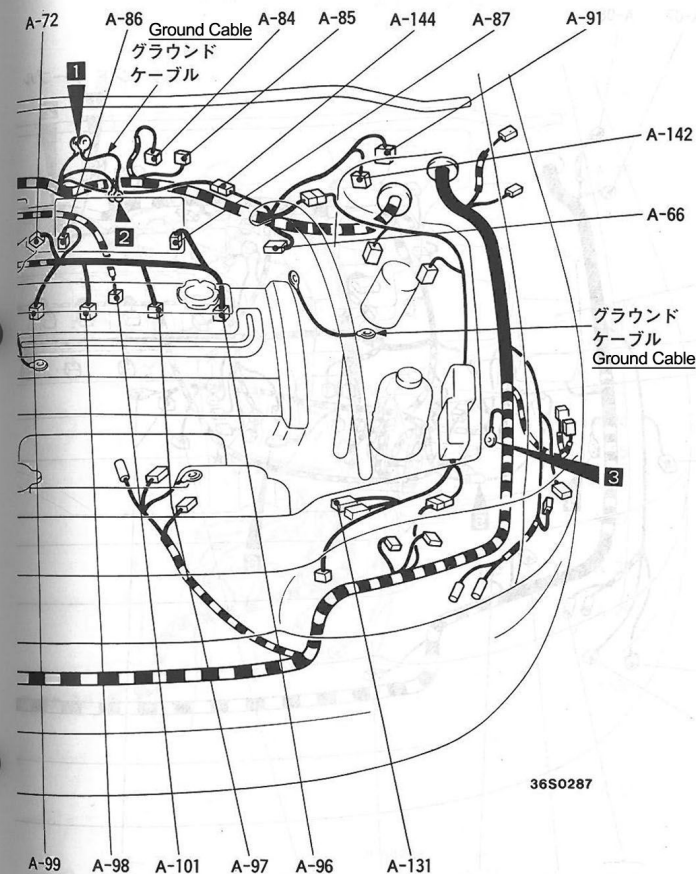
コネクター記号

A

-55
-144

- A-55 } —
- A-59 } —
- A-60 Brake Fluid Level Switch
- A-61 Windshield Wiper Motor
- A-62 Air flow sensor
- A-63 —
- A-64 —
- A-65 —
- A-66 Engine Speed Detecting Terminal
- A-67 ISC Servo
- A-68 —
- A-69 Crank Angle Sensor & TDC Sensor
- A-70 Fuel Pump Check Connector
- A-71 Ignition Timing Adjustment Connector
- A-72 Throttle Position Sensor

- A-73 } —
- A-83 } —
- A-84 Resistor
- A-85 Fuel Pressure Solenoid Valve
- A-86 Power Transistor
- A-87 Ignition Coil
- A-88 —
- A-89 —
- A-90 —
- A-91 Washer Motor
- A-92 —
- A-95 } —
- A-96 Injector No. 1
- A-97 Injector No. 2







- A-98 Injector No. 3
- A-99 Injector No. 4
- A-100 —
- A-101 Knock Sensor
- A-102 } —
- A-106 } —
- A-107 Engine Coolant Temperature Gauge Unit
- A-108 Engine Coolant Temperature Sensor (Engine Control)
- A-109 —
- A-110 —
- A-111 —
- A-112 O2 Sensor
- A-113 —

- A-114 —
- A-115 Backup Light Switch
- A-116 Waste Gate Solenoid Valve
- A-117 } —
- A-130 } —
- A-131 Resistor (for A/C Circuit)
- A-132 } —
- A-141 —
- A-142 Water Spray Motor
- A-143 —
- A-144 No Connection (With A/C)



36S0287

ダッシュ パネル Dash Panel

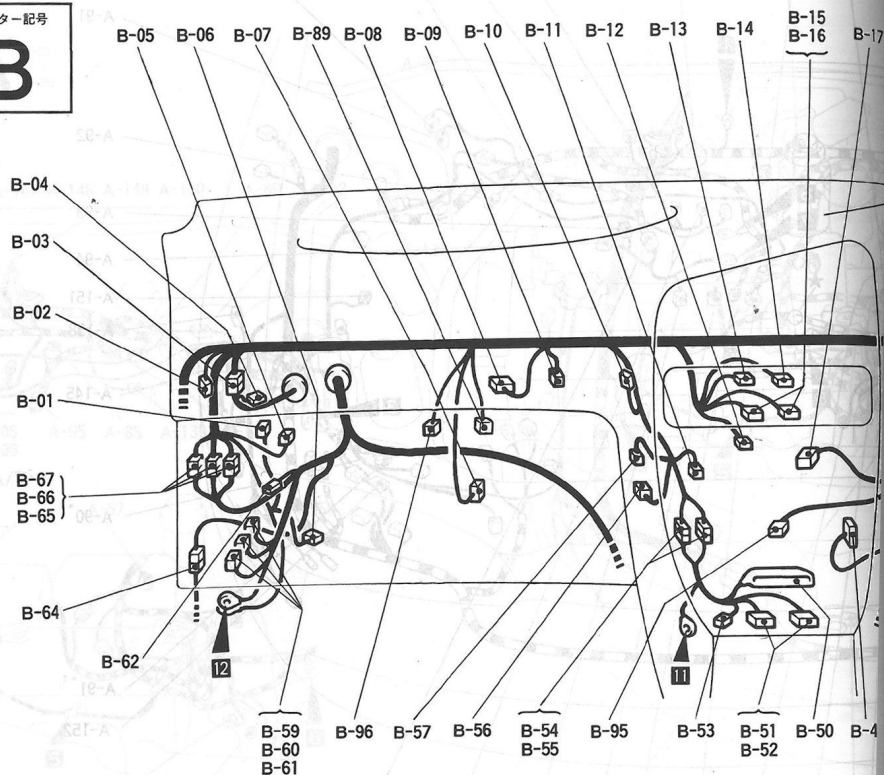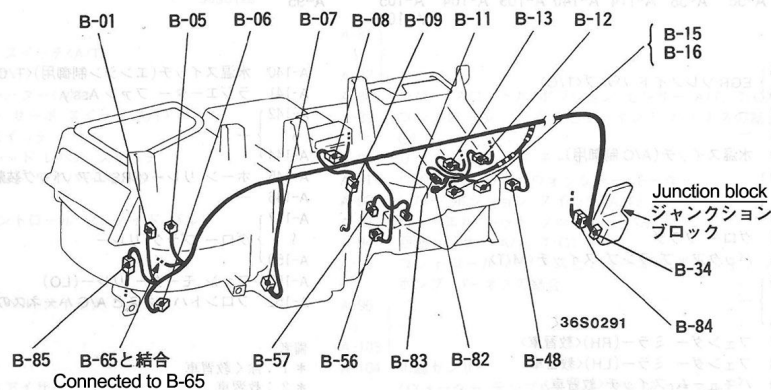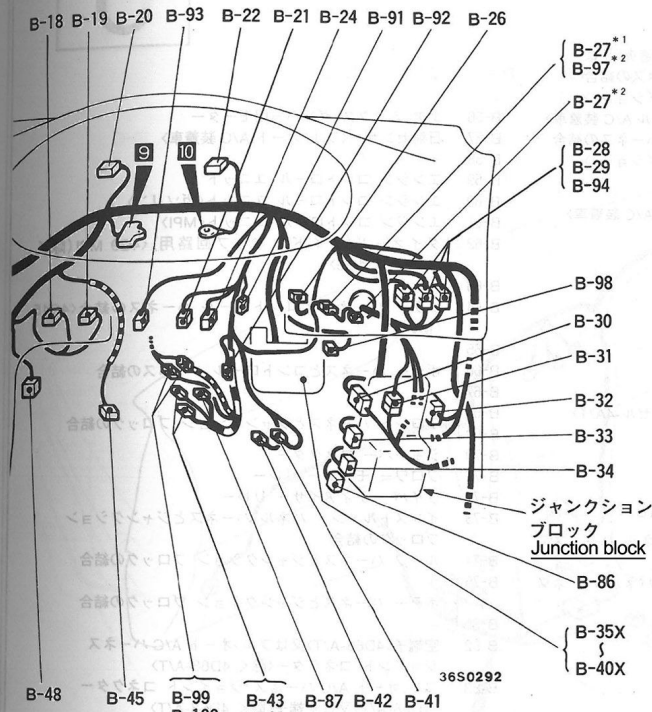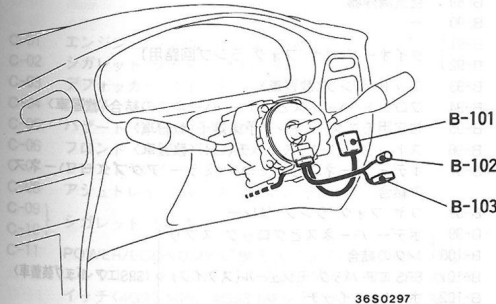コネクター記号

B〈フルオート A/C 装着車(ディーラー オプション)〉 With Full-Auto A/C (Dealer Option)B-85 B-65と結合
Connected to B-65〈SRS エア バッグ装着車〉
With SRS AirbagJunction block

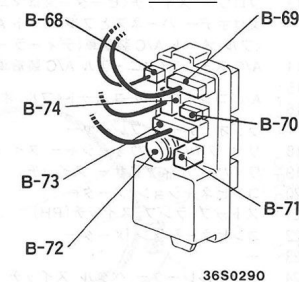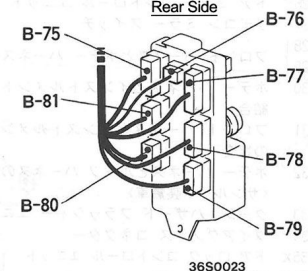ジャンクション ブロック

(前面視)
Front Side(後面視)
Rear Side

- B-01 Blower Motor
- B-02 Transistor Relay <Electronic Carburetor> Or Diode (For Idle-Up Circuit) <MPI except 4G15>
- B-03 Connection of Front Harness and Body Harness (With ABS)
- B-04 Diode (For ABS Circuit) <2WD>
- B-05 Outside/Inside Air Selection Damper Motor
- B-06 Blower Motor High Relay (With Full-Auto A/C)
- B-07 Resistor (Vehicles with Heater or Manual A/C) Or Power Transistor (With Full-Auto A/C)
- B-08 Auto Compressor Control Unit <With Manual A/C> or Connection of Body Harness and Full-Auto A/C Harness <With Full-Auto A/C (Dealer Option)>
- B-09 Air Thermo Sensor <With Full-Auto A/C>
- B-10 Diode (For ABS Circuit)
- B-11 Coolant Temperature Sensor <With Full-Auto A/C>

備考 Note:

- * 1 : Without Remote Control Adaptor Harness
- * 2 : With Remote Control Adaptor Harness

ダ ッ シ ュ パ ネ ル Dash Panel

コネクタ記号


B-12	Clock <Vehicle With Heater or Manual A/C> or Connection of Body Harness and Full-Auto A/C <With Full-Auto A/C (Dealer Option)>	
B-13	Blower Switch <Vehicle With Heater or Manual A/C> or Connection of Body Harness and Full-Auto A/C <With Full-Auto A/C (Dealer Option)>	
B-14	A/C Switch <With Manual A/C>	
B-15 }	A/C Control Unit <With Full-Auto A/C>	
B-16 }		
B-17	Radio/Cassette Player	
B-18	Rear Wiper and Washer Switch	
B-19	Wiper Deicer Switch	
B-20	Combination Meter	
B-21	Stop Light Switch (RH)	
B-22	Combination Meter	
B-23	—	
B-24	Accelerator Pedal Switch <Electronic Carburetor-4A/T, Diesel-4A/T>	
B-25	—	
B-26	Door Mirror Control Unit	
B-27	Remote Controlled Mirror Switch	
B-28 }	Connection of Front Harness and Body Harness	
B-29 }		
B-30	Connection of Body Harness and Instrument Panel Wiring Harness	
B-31	Connection of Front Harness and Instrument Panel Wiring Harness	
B-32	Connection of Body Harness and Roof Harness <Vehicle With Sunroof>	
B-33	Turn/Hazard Flasher Unit	
B-34	Diagnosis Connector	
B-35X	Door Lock Control Unit	
B-36X	ABS Power Relay	
B-37X	Power Window Relay	
B-38X	Ignition Key Illumination Light Timer	
		Centralized Junction 集中ジャンクション
B-39X	Defogger Relay	
B-40X	Cornering Light Relay	
B-41	Key Reminder Switch	
B-42	Ignition Switch	
B-43 }	Column Switch	
B-44 }		
B-45 }	—	
B-46 }		
B-47	—	
B-48	A/C Wind Outlet Selection Damper Motor	
B-49	Buzzer Ass'y	
B-50	ABS Control Unit <4WD>	
B-51 }	ABS Control Unit <2WD>	
B-52 }		
B-53	Diagnosis Code Erase Connector <2WD>	
B-54 }	Connection of Body Harness and ABS Harness	
B-55 }		
B-56	Air Blend Damper Motor	
B-57	Sunlight Detecting Sensor	
B-58	—	
B-59	Engine Control Unit	
B-60	Engine Control Unit <Gasoline>	
B-61	Engine Control Unit <MPI>	
B-62	Diode (For Idle-Up Circuit) <4G9 MPI, 4G6, Except MIVEC>	
B-63	—	
B-64	Connection of Body Harness and Control Harness <4G15 (MVV)>	
B-65 }	Connection of Body Harness and Control Harness	
B-66 }		
B-67 }	Connection of Front Harness and Junction Block	
B-68 }		
B-69 }	Jumper Connector	
B-70 }		
B-71	Blower Motor Relay	
B-72	Wiper Deicer Relay	
B-73	Connection of Instrument Panel Wiring Harness and Junction Block	
B-74	Connection of Roof Harness and Junction Block	
B-75 }	Connection of Body Harness and Junction Block	
B-76 }		
B-81 }	No Connection <4D68 A/T> or Full-Auto A/C Harness Joint Connector <Except 4D68 A/T>	
B-82 }		
B-83	Full-Auto A/C Harness Joint Connector <4D68 A/T> or No Connection <Except 4D68 A/T>	
B-84	Connection of Body Harness and Full-Auto A/C Harness	
B-85	Connection of Body Harness and Full-Auto A/C Harness	
B-86	No Connection	
B-87	No Connection	
B-88	—	
B-89	Air Cleaner	
B-90	—	
B-91 }	Diode for Rear Fog Light Circuit	
B-92 }		
B-93	Foot light <Training Vehicle>	
B-94	Connection of Front Harness and Body Harness <Training Vehicle>	
B-95	Monitor Light Spare Connector for Instructor <Training Vehicle>	
B-96	Stop Light Switch (LH) <Training Vehicle>	
B-97	Connection of Body Harness and Remote Controlled Mirror Adapter	
B-98	Rear Fog Light Relay	
B-99 }	Connection of Body Harness and Airbag Clock Spring	
B-100 }		
B-101	SRS Airbag Module (Squib)	
B-102	Horn Switch	
B-103	No Connection	

 <Vehicle With SRS Airbag>
 (SRS エア バッグ装着車)

インストルメント パネル *Instrument Panel*

コネクタ記号

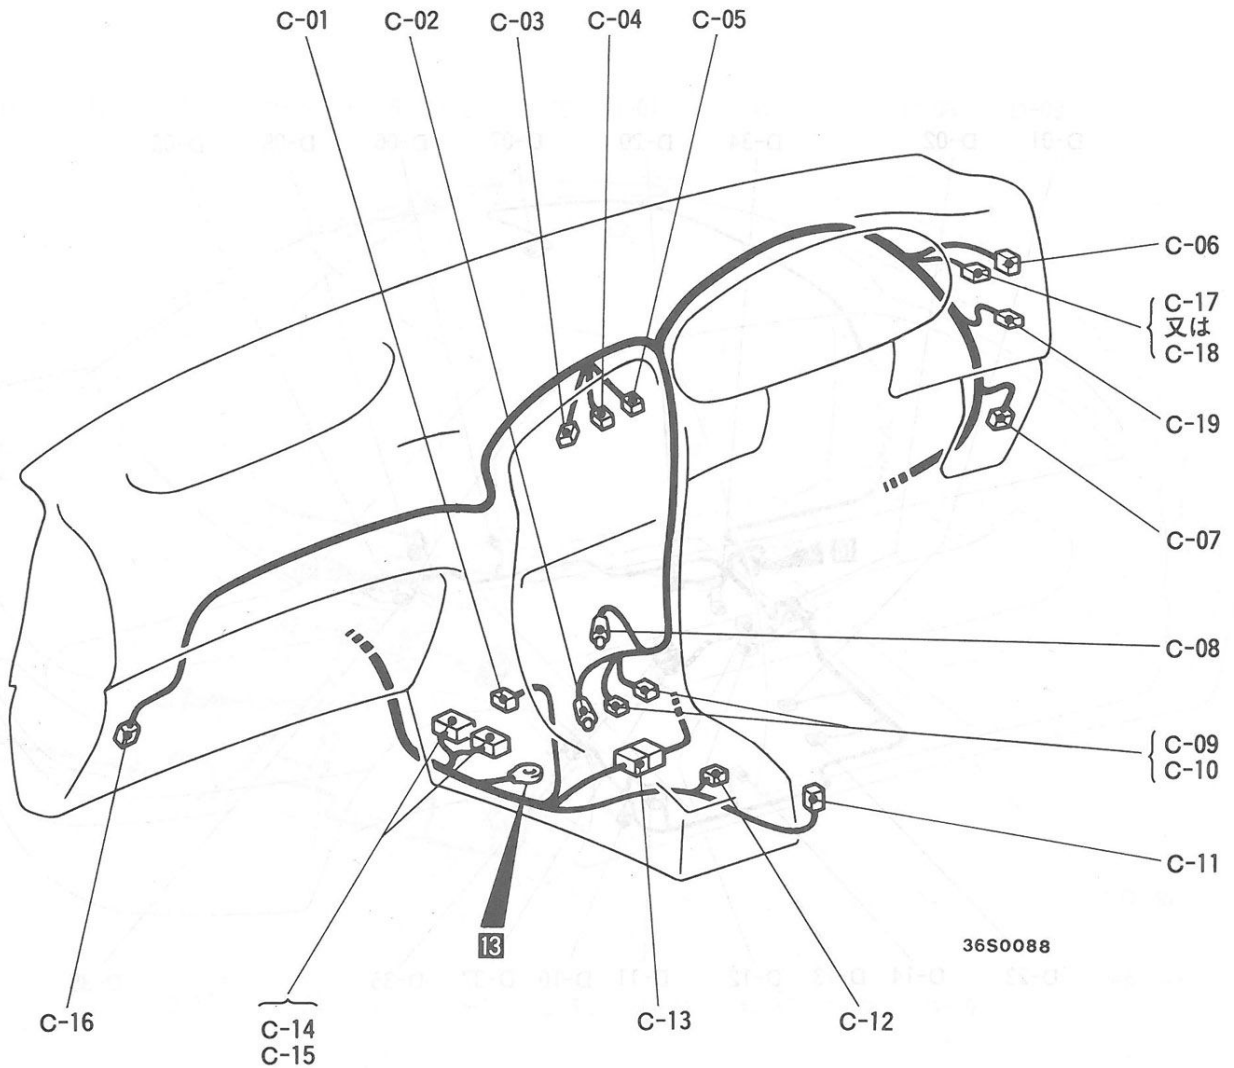C



- C-01 Engine Control Relay <MPI>
 C-02 Cigarette Lighter Illumination Light
 C-03 Defogger Switch
 C-04 No Connection
 C-05 Hazard Warning Switch
 C-06 Front Fog Light Switch
 C-07 Front Speaker (RH)
 C-08 Ashtray Illumination Light
 C-09 } Cigarette Lighter
 C-10 }
 C-11 Power/Economy Changeover Switch
 <4G15 MPI, 4G91 Electronic Carburetor>
 or Power/Hold Changeover Switch <4G92 MPI, 4G93 MPI>
 or A/T Mode Changeover Switch <4G91 MPI, 6A10>

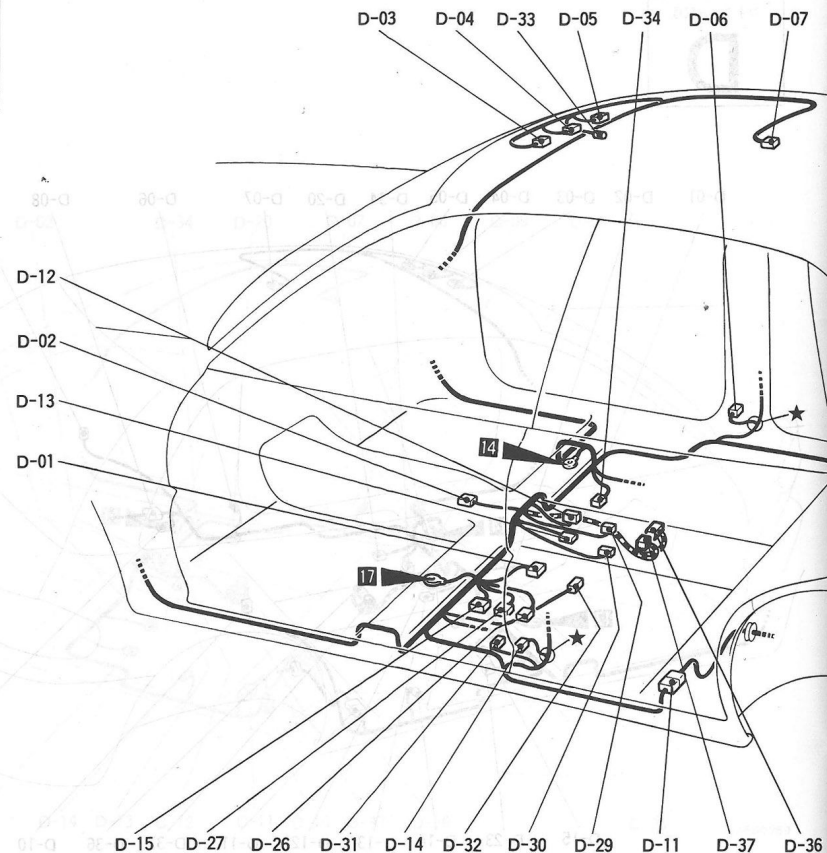
- C-12 Automatic Selector Lever Position Illumination Light <3A/T>
 or Overdrive Switch <4A/T>
 C-13 Connection of Body Harness and Control Harness <A/T>
 C-14 } ELC-4A/T Control Unit
 C-15 }
 C-16 Front Speaker (LH)
 C-17 No Connection <6A10>
 C-18 Rear Fog Light Switch <Libero>
 C-19 Rear Electric Gate Lock Switch <Libero>

フロア・ルーフ *Floor and Roof*

ミラージュ セダン・ランサー

コネクタ記号

D



D-01 Exhaust Temperature Sensor (Heated oxygen sensor) <Gasoline>

D-02 ABS G-Sensor <4WD>

D-03 Sunroof Motor

D-04 Dome Light and Sunroof Switch <Vehicle With Sunroof>

D-05 Sunroof Control Unit

D-06 Front Door Switch (RH)

D-07 Dome Light <Vehicle Without Sunroof>

D-08 Connection of Body Harness and Rear Harness

D-09 —

D-10 —

D-11 Connection of Body Harness and Fuel Harness

D-12 Heated Seat Switch

D-13 Parking Brake Switch

D-14 Front Door Switch (LH)

D-15 Linear A/F Sensor Amp

<4G15(MVV)>

D-16 Reclining Motor

D-17 Slide Limit Switch

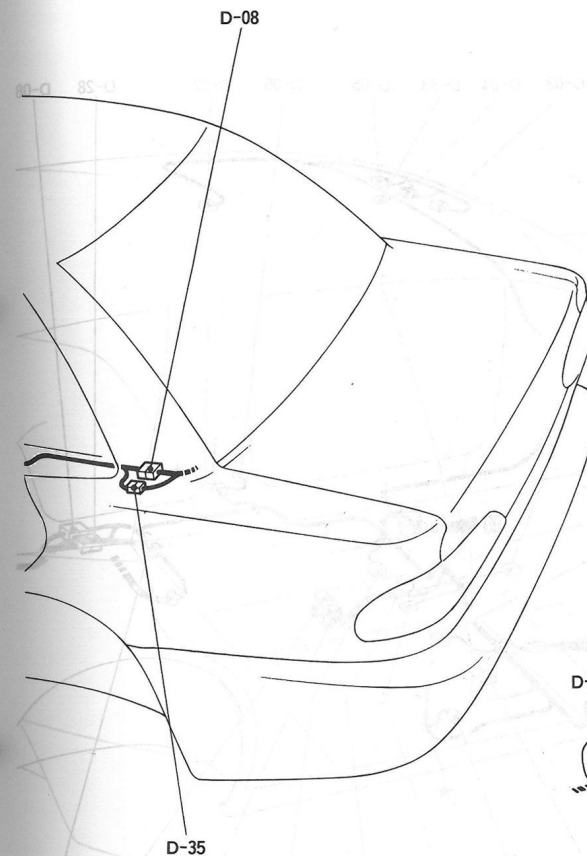
D-18 Power Seat Switch

D-19 Slide Motor

D-20 Connection of Body Harness and Heated Seat Harness

(RH)

D-21 Seat Back Heater (RH)



D-22 Seat Back Heater (LH)

D-23 Connection of Body Harness and Heated Seat Harness (LH)

D-24 Seat Cushion Heater (LH)

D-25 Seat Cushion Heater (RH)

D-26 No Connection

D-27 —

D-28 —

D-29 Water Spray Switch <4G63>

D-30 Foot Light Switch <Training Vehicle>

D-31 Front Seat Belt Solenoid (LH) <Training Vehicle>

D-32 Front Seat Belt Switch (LH) <Training Vehicle>

D-33 Map Light

D-34 Front Seat Belt Solenoid (RH)

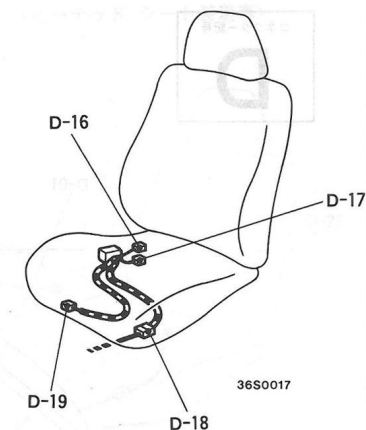
D-35 Connection of Body Harness and Rear Harness <Vehicle With Keyless Entry>

D-36 SRS Airbag Control Unit

D-37 —

Vehicle With Power Seat

<パワー シート装着車>




36S0017

D-18

Vehicle With Heated Seat
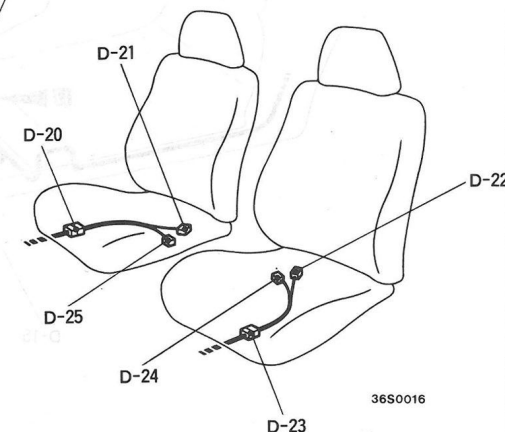
<ヒーター シート装着車>





36S0016

ドア Door

Driver's Side Front Door
(運転席側フロント ドア)

コネクター記号

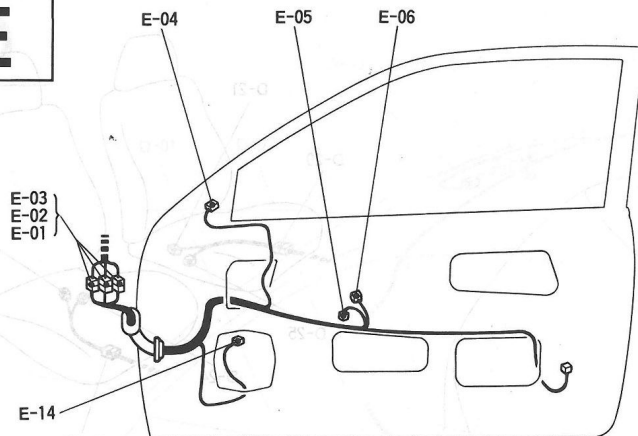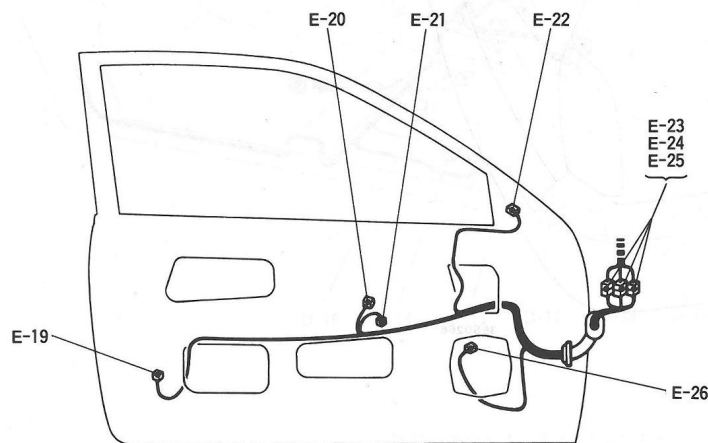E



Passenger's Side Front Door
(助手席側フロント ドア)

- E-01 } Connection of Body Harness and Front Door Harness
- E-02 } (RH)
- E-03 } (RH)
- E-04 Door Mirror (RH)
- E-05 Front Power Window Motor (RH)
- E-06 Power Window Main Switch
- E-07 —

- E-08 —
- E-09 Connection of Body Harness and Rear Door Harness (RH)
- E-10 Rear Power Window Sub Switch (RH)
- E-11 Rear Power Window Motor (RH)
- E-12 Rear Door Lock Actuator (RH)
- E-13 Front Door Lock Actuator (RH)
- E-14 Front Door Speaker (RH)

36S0263

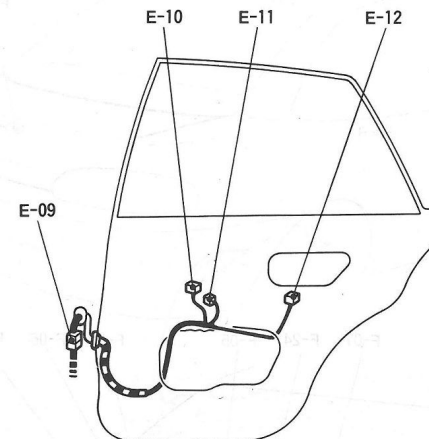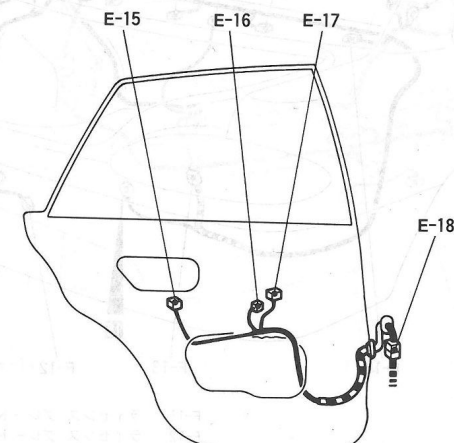36S0015

Driver's Side Rear Door
(右側リヤ ドア)Passenger's Side Rear Door
(左側リヤ ドア)

F-01

F-02

F-03

F-04

F-05

F-06

F-07

F-08

F-09

F-10

F-11

F-12

F-13

F-14

F-15

F-16

F-17

F-18

F-19

F-20

F-21

F-22

F-23

F-24

F-25

F-26

F-27

F-28

F-29

F-30

F-31

F-32

F-33

F-34

F-35

F-36

F-37

F-38

F-39

F-40

F-41

F-42

F-43

F-44

F-45

F-46

F-47

F-48

F-49

F-50

F-51

F-52

F-53

F-54

F-55

F-56

F-57

F-58

F-59

F-60

F-61

F-62

F-63

F-64

F-65

F-66

F-67

F-68

F-69

F-70

F-71

F-72

F-73

F-74

F-75

F-76

F-77

F-78

F-79

F-80

F-81

F-82

F-83

F-84

F-85

F-86

F-87

F-88

F-89

F-90

F-91

F-92

F-93

F-94

F-95

F-96

F-97

F-98

F-99

F-100

F-101

F-102

F-103

F-104

F-105

F-106

F-107

F-108

F-109

F-110

F-111

F-112

F-113

F-114

F-115

F-116

F-117

F-118

F-119

F-120

F-121

F-122

F-123

F-124

F-125

F-126

F-127

F-128

F-129

F-130

F-131

F-132

F-133

F-134

F-135

F-136

F-137

F-138

F-139

F-140

F-141

F-142

F-143

F-144

F-145

F-146

F-147

F-148

F-149

F-150

F-151

F-152

F-153

F-154

F-155

F-156

F-157

F-158

F-159

F-160

F-161

F-162

F-163

F-164

F-165

F-166

F-167

F-168

F-169

F-170

F-171

F-172

F-173

F-174

F-175

F-176

F-177

F-178

F-179

F-180

F-181

F-182

F-183

F-184

F-185

F-186

F-187

F-188

F-189

F-190

F-191

F-192

F-193

F-194

F-195

F-196

F-197

F-198

F-199

F-200

F-201

F-202

F-203

F-204

F-205

F-206

F-207

F-208

F-209

F-210

F-211

F-212

F-213

F-214

F-215

F-216

F-217

F-218

F-219

F-220

F-221

F-222

F-223

F-224

F-225

F-226

F-227

F-228

F-229

F-230

F-231

F-232

F-233

F-234

F-235

F-236

F-237

F-238

F-239

F-240

F-241

F-242

F-243

F-244

F-245

F-246

F-247

F-248

F-249

F-250

F-251

F-252

F-253

F-254

F-255

F-256

F-257

F-258

F-259

F-260

F-261

F-262

F-263

F-264

F-265

F-266

F-267

F-268

F-269

F-270

F-271

F-272

F-273

F-274

F-275

F-276

F-277

F-278

F-279

F-280

F-281

F-282

F-283

F-284

F-285

F-286

F-287

F-288

F-289

F-290

F-291

F-292

F-293

F-294

F-295

F-296

F-297

F-298

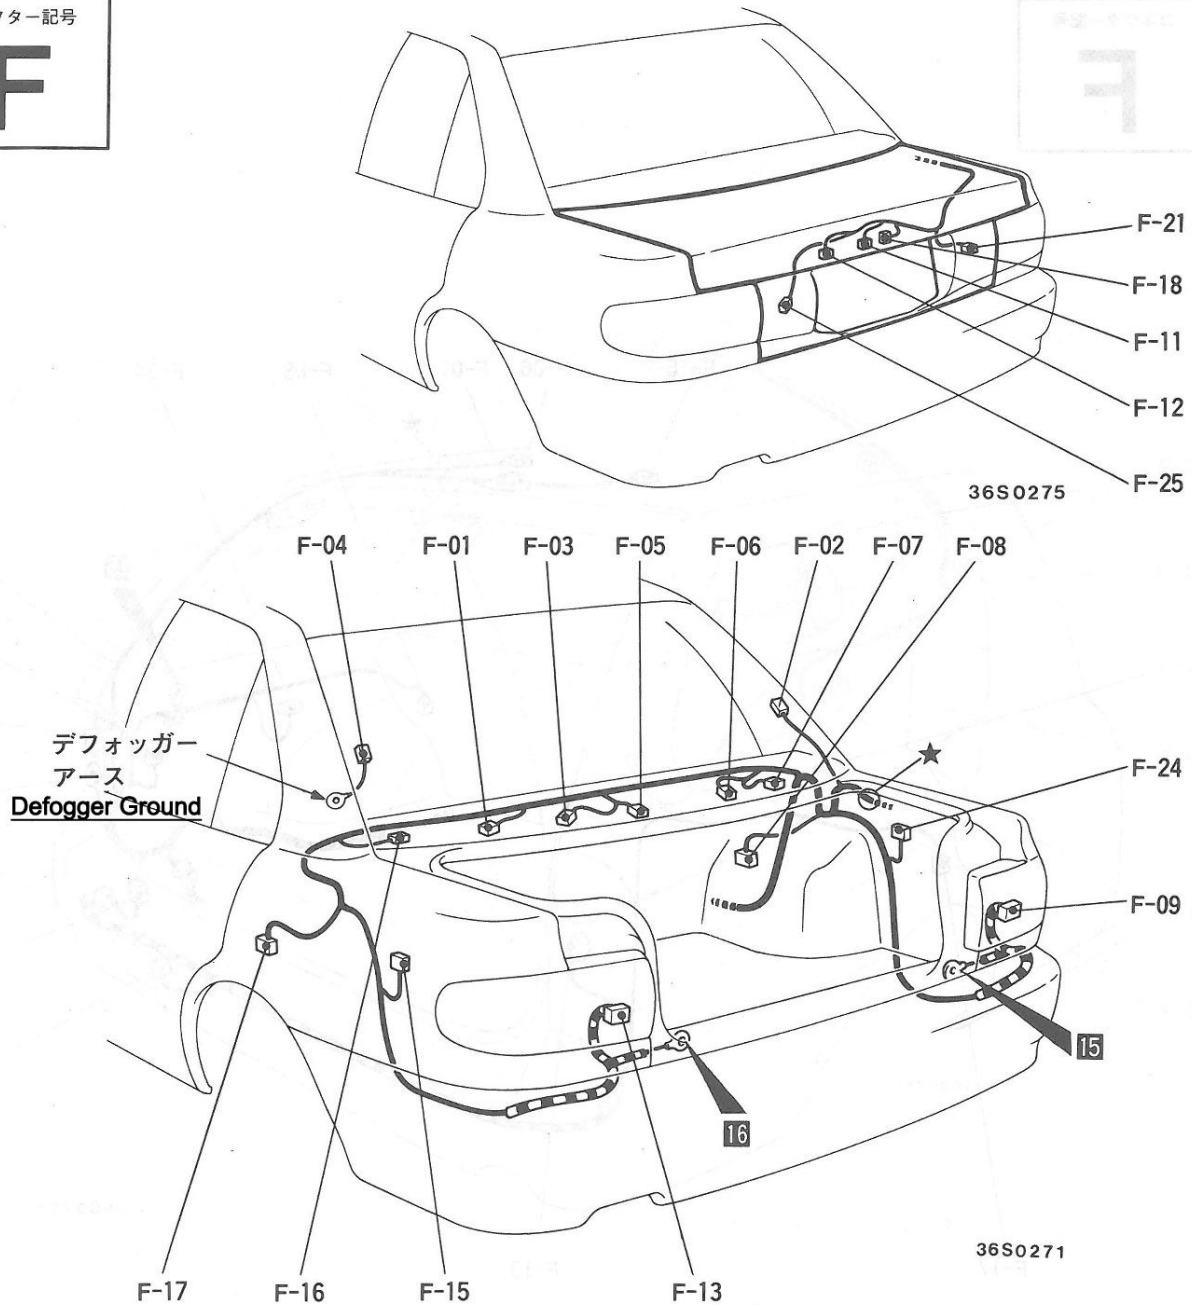
F-299

F-300

F-301

カーゴ ルーム ・ トランク ルーム Cargo/Trunk Room ランサー

コネクタ記号

F

- F-01 Trunk Room Light
- F-02 Defogger (+)
- F-03 Rear Wiper Motor
- F-04 Defogger (-)
- F-05 High-Mounted Stop Light (Rear Shelf)
- F-06 Rear Speaker (RH)
- F-07 Rear Trunk Room Light Switch
- F-08 Rear Door Switch (RH)
- F-09 Rear Combination Light (RH)
- F-10 —
- F-11 License Plate Light (RH)
- F-12 License Plate Light (LH)
- F-13 Rear Combination Light (LH)

- F-14 —
- F-15 Motor Antenna
- F-16 Rear Speaker (LH)
- F-17 Rear Door Switch (LH)
- F-18 High-Mounted Stop Light (Rear Spoiler)
- F-19 —
- F-20 —
- F-21 Rear Fog Light (RH)
- F-22 —
- F-23 —
- F-24 Receiver
- F-25 Rear Fog Light (LH)

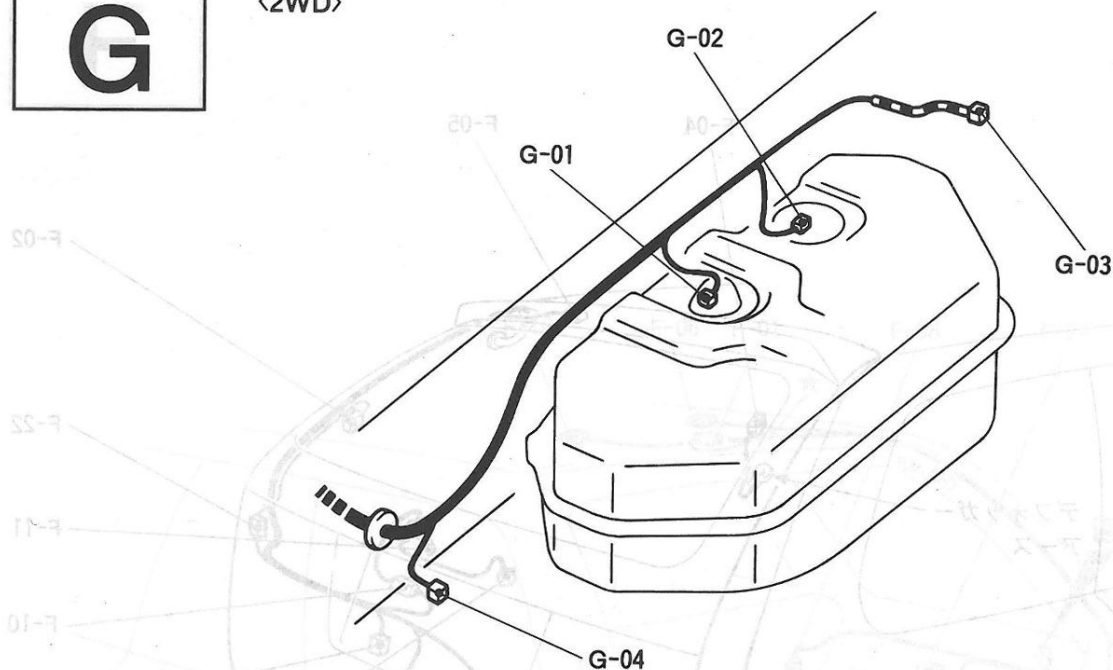
リヤ フロア下部 Rear Underfloor

ミラージュ・ランサー

コネクター記号


G

<2WD>



36S0018
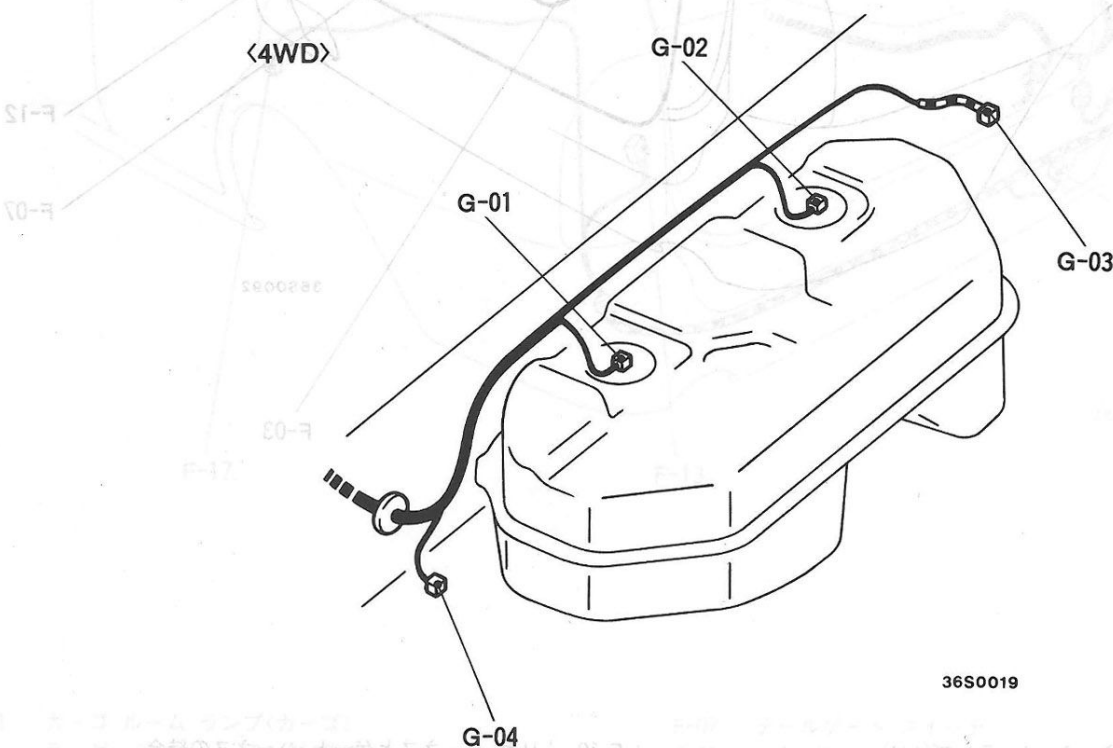
<4WD>



36S0019

- G-01 Fuel Gauge Unit <2WD> or Sub Fuel Gauge Unit <4WD>
- G-02 Fuel Pump <2WD> or Fuel Pump Main Fuel Gauge Unit <MPI-4WD>
or Main Fuel Gauge Unit <Electronic Carburetor-4WD, Diesel-4WD>
- G-03 ABS Speed Sensor <Rear : RH>
- G-04 ABS Speed Sensor <Rear : LH>